

# ASSEMBLY INSTRUCTIONS PIE CONNECTOR TABLES

NOTE: Please count and inspect all pieces before disposing of any carton or packing materials.

## COMPONENTS

When ordering components, specific color and/or size information may be required. Contact a Mayline Customer Service Representative. 1-800-822-8037


<u>REF#</u>	<u>QTY.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>
1	1	Top	CALL ~~~**

\*\* Denotes Color Code  
~~Denotes Size

## HARDWARE BAG (Part No. A7935 \*)


<u>REF#</u>	<u>QTY.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>
E1	4	Bracket, Ganging	B8099 *
E2	4	Knob 1/4-20 x 1/2	K37 *
E3	20	Screw #10 x 3/4	X11 *

\* Individual Items, Order by part number.

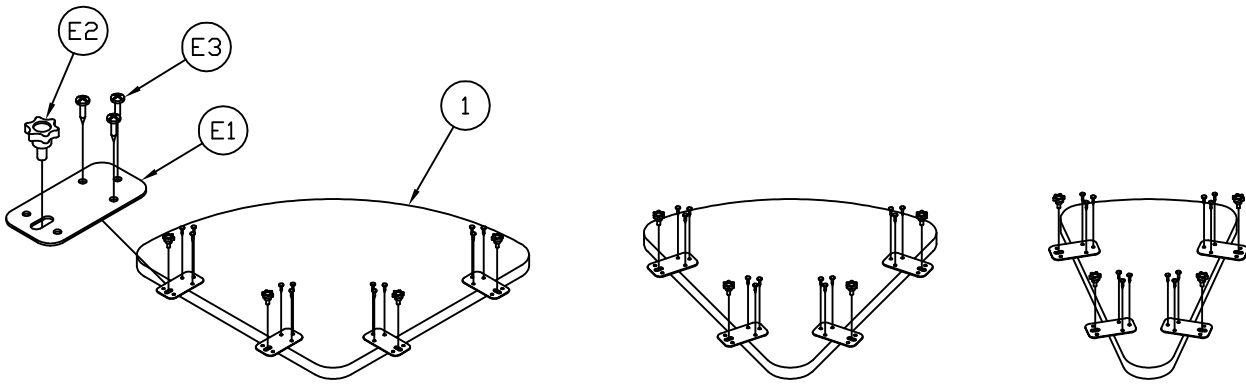




## Assembly

1. Place Assembled Table face down on a clean flat surface and position the Pie Connecting table. See Fig. #1a & 1b.
2. Attach Bracket (E1) to Assembled Top using Knobs (E2) at a 90 degree angle & centered in obround hole (4X). See Fig. #1a & 1b.

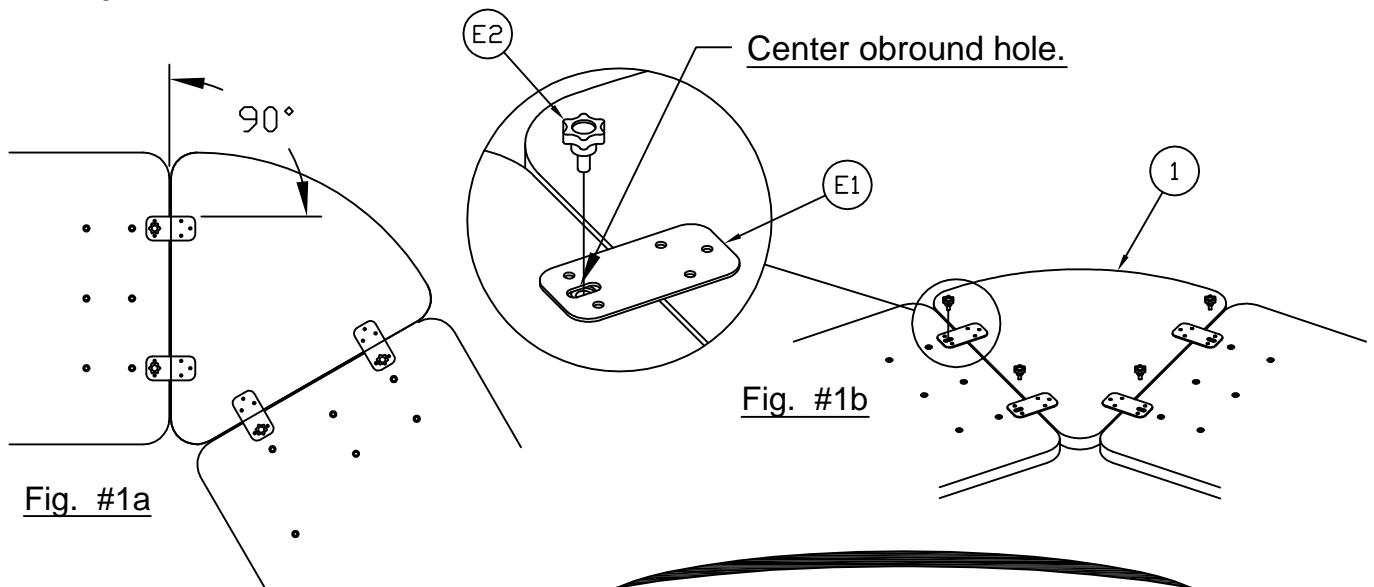

Assembly

3. Attach Pie Top (1) to Brackets (E1) using three Screws (E3) per bracket. See Fig. #3 No pilot hole necessary.
4. Remove Knobs (E1) & slide the Pie Table outward. See Fig. #4
5. Rotate Tables Right side up. Attach Knobs (E2) to Tables. See Fig. #5

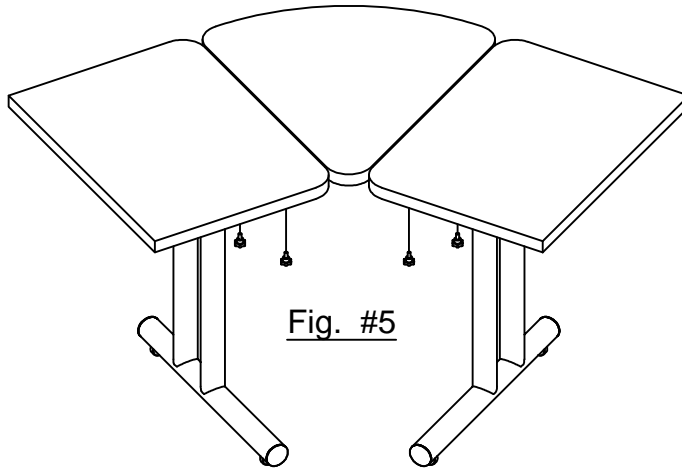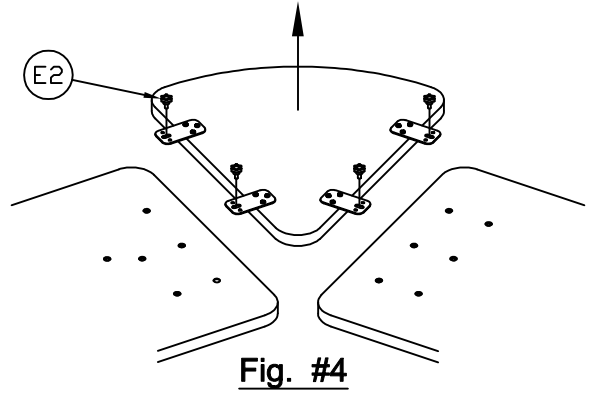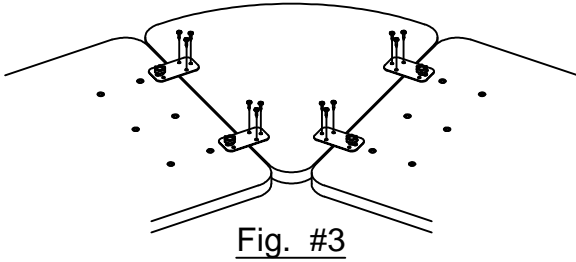

Permanent Ganging Option

1. Extra Screws (E3) are provided for a permanent ganging solution or in a permanent conference table setting.

