

## DISPLAY BOARDS

### INSTRUCTIONS

1. Remove Display Board from the carton. Leave the protective plastic coating on the plexiglass until installation is complete.
2. With at least two people, have one person hold the Display Board in place on top of the sorter. The other person should mark the sorter top with a pen or pencil where the predrilled Display board mounting holes are found. Be sure the face of the Display Board and the sorter front are flush. Remove the Display Board.
3. Drill holes in the sorter top where marked.
4. While holding the Display Board in place, install the bolts, lock washers and nuts. Lock washer and nut should be threaded above sorter top. Tighten bolt with slotted screwdriver until lock washers create tension.
5. Remove plastic protective cover from face of plexiglass by pulling at a slow steady rate.

