
## **ARC Rotary File**

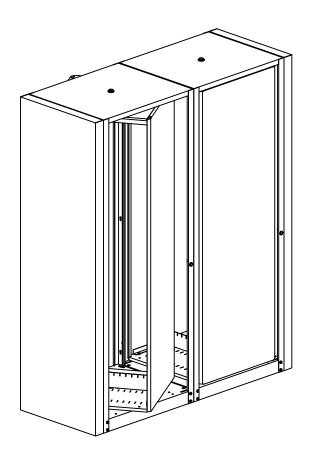

Verify components and quantities per factory packing list.

Assembly requires two people.

The floor should be firm so that the ARC is effectively leveled.

Measure actual space that your system will occupy and compare with layout sketch. Also note configuration of ARC units if more than one unit is involved.


Then positioning ARC unit! place letter unit no closer than 5-1/4 inches from wall. The legal unit no closer then 6-1/2 inches from wall.



#### **Required Tools:**

- 1. Bubble Level
- 2. Power Screwdriver with #2 & #3 Phillips Head Driver
- 3. Ratchet with 7/16" socket & 1/4" long neck socket
- 4. Ladder

#### **Arc Component Identification:**

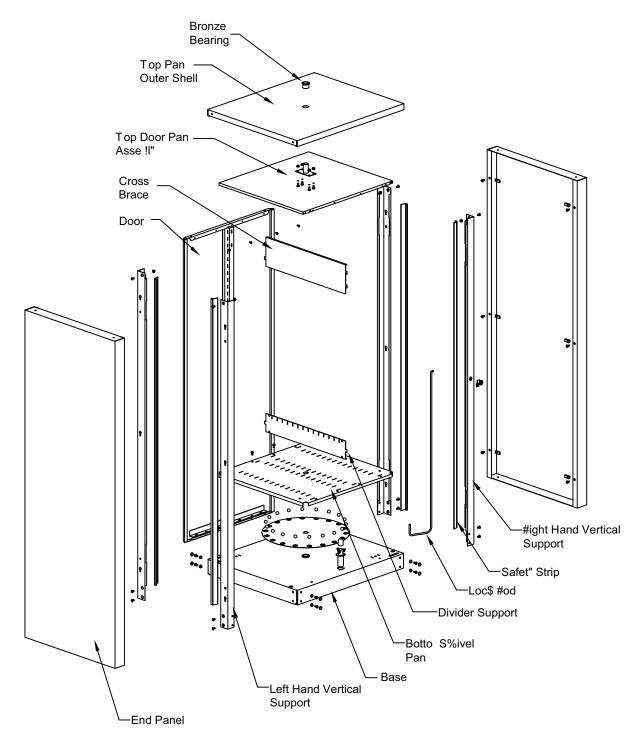

#### Hardware Box (LARCKIT & GARCKIT) Consist of:

<b>Base Stop Plunger</b> 912251'	<b>Base Stop Spring</b> 912252	Hardware Kit Arc Caps and Plugs 913043
Replacement Part: 912251R	Replacement Part: 912252R	Replacement Part: 913043R
Lock and Nut 900701	<b>Top Pan Shaft</b> 84080300	Bearings 918109 Letter Qty (19) Legal Qty (25)
Replacement Part: 900701R	Replacement Part: 84080300R	Replacement Part: 918109R - Kit of (25)
Bronze Bearing 918106	Base Stop Cup 912250	Hardware Kit Arc Fasteners 913044
Replacement Part: 918106R	Replacement Part: 912250R	Replacement Part: 913044R

,

#### Hardware Box (LARCKIT & GARCKIT) Con't:


# Bag #913044 - HARDWARE KIT ARC FASTENERS Replacement Part 0 913044R 1 - 1/16" X 1/2 " LONG COTTER PIN 1 3 - SCREW TEK 10-16 X 1/2" PH PAN HD 1 12 - U-NUT 1/4-20 END PANEL 1 14 - NUT 1/4-20 WITH STAR WASHER 1 12 - SCREW PAN HEAD MACH 1/4-20 X 1/ 2" L 1 12 - SCREW FLAT HEAD MACH 1/4-20 X 1/ 2" L 1 12 - SCREW FLAT HEAD MACH 1/4-20 X 1/ 2" L 1 13 - SCREW #10 X 1/2" PPHSMS 1

<u>Bag #913043</u>	3 - HARDWARE KIT ARC CAPS & PLUGS	Replacement Part 0
	2 - HEYCO LOCKIT MOUNTING HOLE PLUGS	9 <mark>13043</mark> R
	8 - FLAT BTM 1/4 " SNAP CAP WASHER (12/12-1/4)	
	8 - BROOKER BEIGE SNAP CAP (12/12-120)	l
	8 - MORNING GRAY SNAP CAP (12-12-170)	
	8 - BLACK SNAP CAP (12/12-180)	ļ

Remainin& Components:	Replacement Part #
1: Top Pan Shaft	- 84080300R
1 : Lock 5/8" Keyed Alike Pj3402	– 900701R
1: Base Stop Cup	– 912250R
1: Base Stop Plunger	- 912251R
1 : Base Stop Spring — — — — — — — — — – – – – – – – – – –	– 912252R
1: Bearing 1.002" id x 1" Length	– 918106R
25 : Ball Bearing 5/8"	- 918109R


#### 1. Arc Base

Position base so base stop hole is facing into the install room. Remove the bottom swivel pan. (Fig. 1.1) Install the base stop cup, spring & plunger. The stop cup is secured to the base by using (3) 10-16x1/2" Phillips Pan Head screws into pre-drilled holes in base (Fig. 1.2)

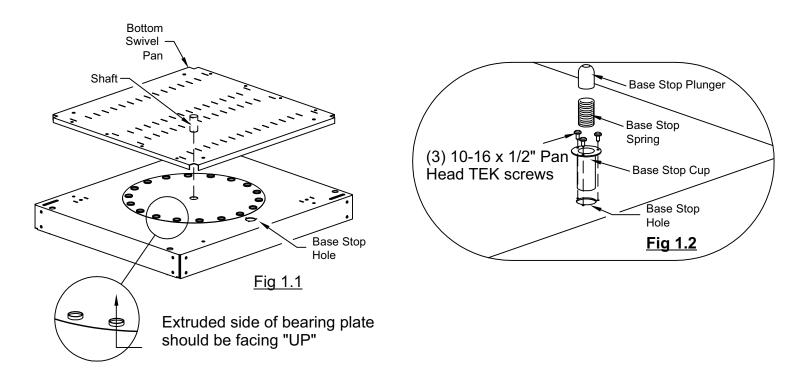


Add ball bearings to the bearing plate.


A letter base will use 18 bearings and the legal base will use 24 bearings (25 bearings are included in bag). Place a ball bearing in each extruded hole. Replace top swivel pan by slowly lowering the shaft on the underside of the bottom swivel pan into the stationary base. Check for proper rotation. Remove ATTENTION label from swivel pan (Fig 1.3)

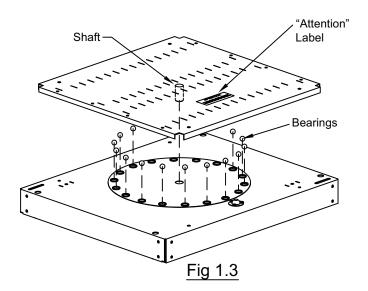


#### 2. Vertical Supports

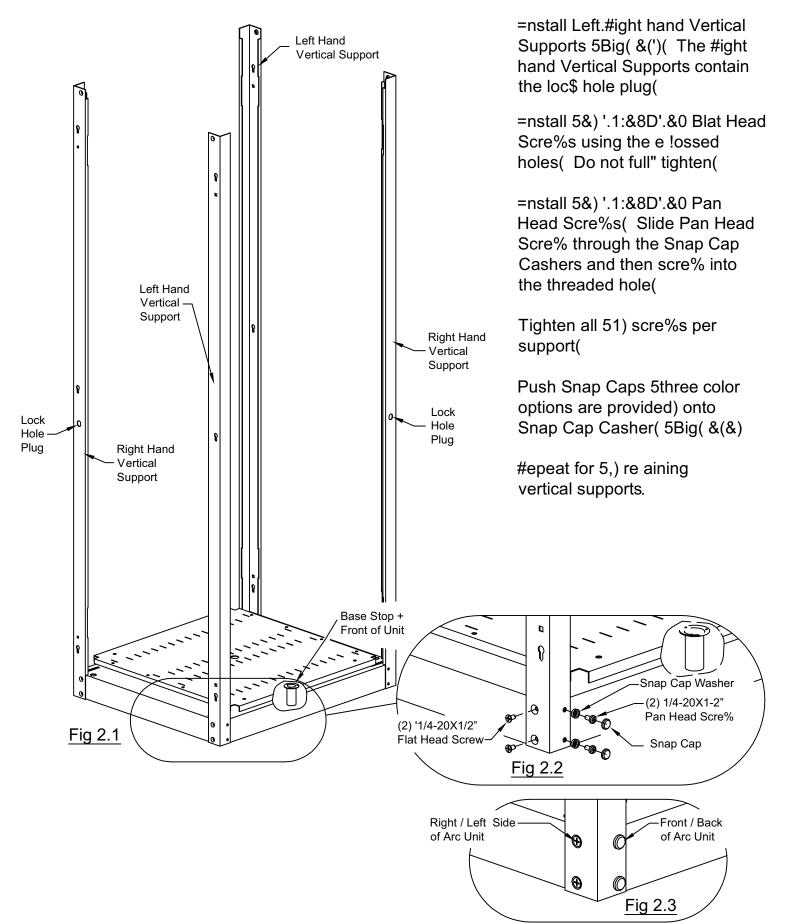

#### 3. Doors

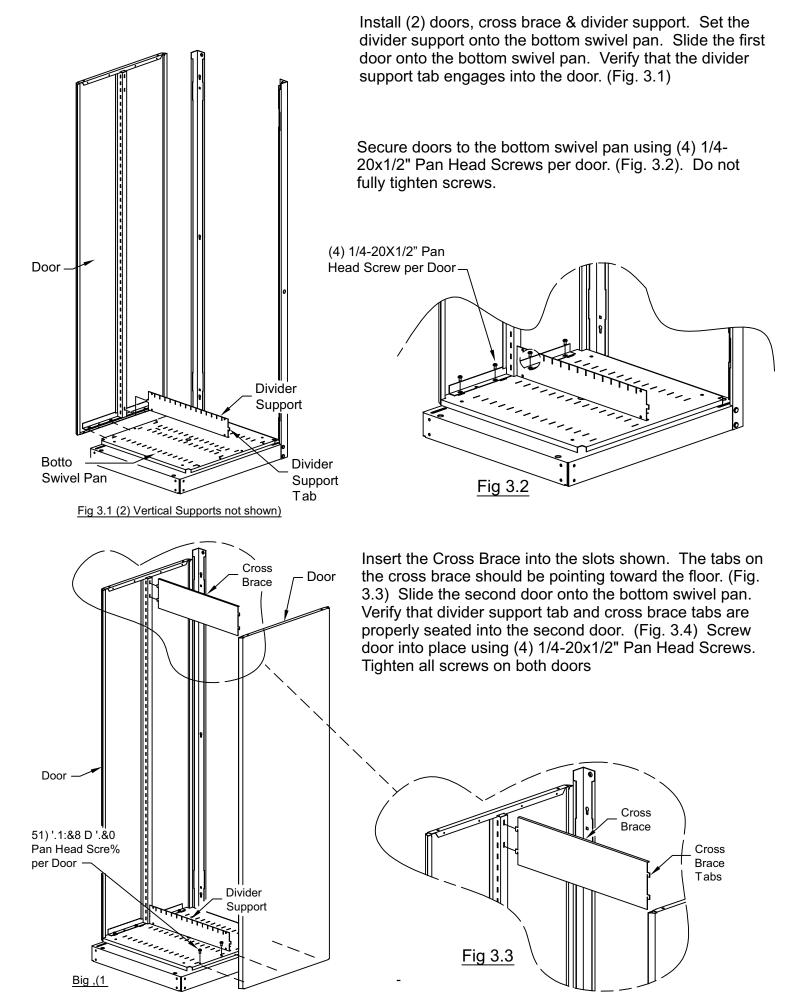

**4. Top Door Pan Assembly** Mount the Top Pan Shaft to the Door Top Pan using (4) 1/4-20x1/2" Pan Head Screws and (4) 1/4-20 Nuts Washer. with Star Washers. (Fig. 4.1)

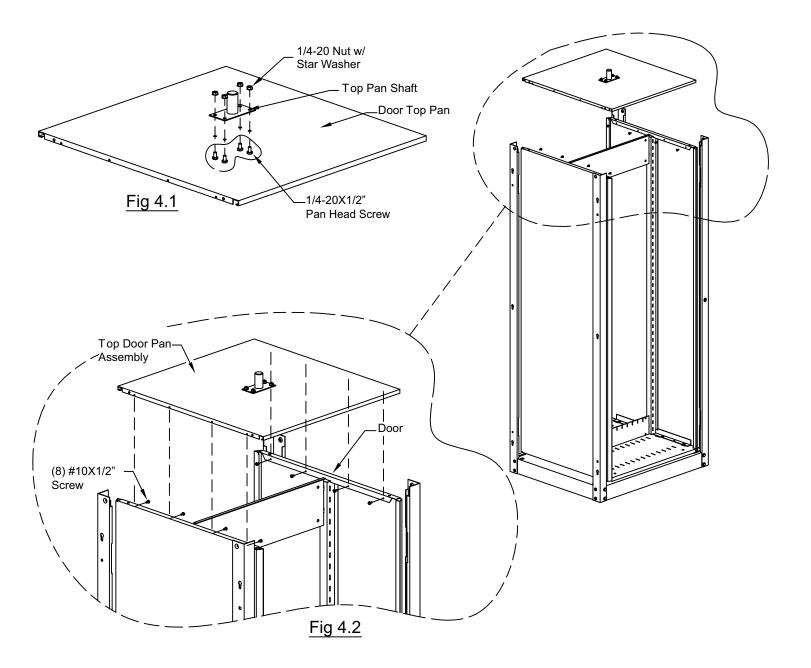


Start (8) #10x1/2" screws in the pre-drilled holes at top of the doors, do not tighten screws.


With the top pan shaft positioned toward the ceiling, lower the door top pan assembly onto the door screws. Once door top pan assembly is in the correct position, tighten all (8) #10x1/2" screws. (Fig. 4.2)

#### 5. Top Pan Outer Shell

Secure the Top Pan Outer Shell to the (4) vertical supports by using (4) 1/4-20x1/2" Flat Head Screws & (4) 1/4-20 Nuts w/ star washers. (Fig. 5.1) Flat Head Screws should be flush with the vertical supports. (Fig. 5.2)

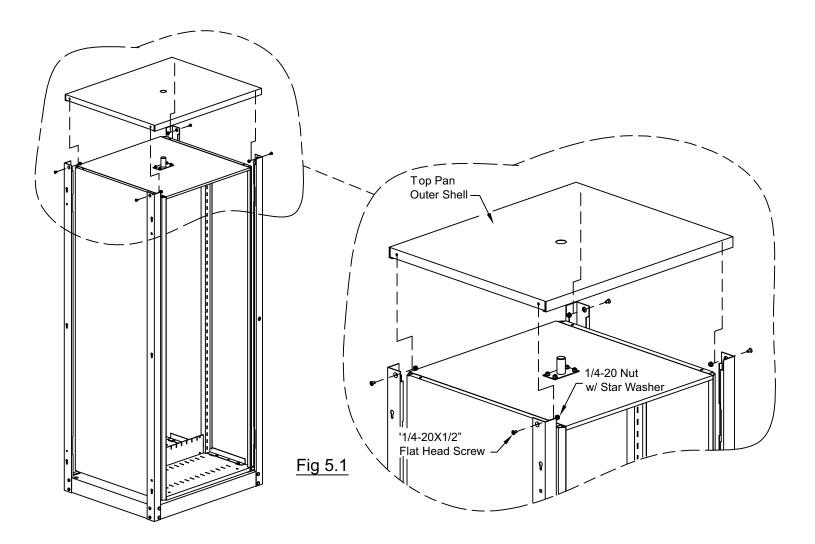



Slide the Bronze Bearing over the protruding shaft and press the bearing into the top pan outer shell hole.

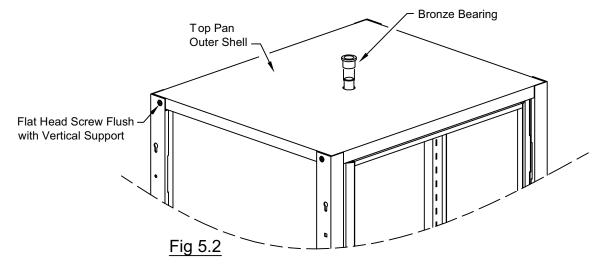


#### 6. End Panel


Slide Arc units into the correct position. Place the back side of the letter units no closer than 5-1/4" from wall, legal units no closer than 6-1/2" from wall.

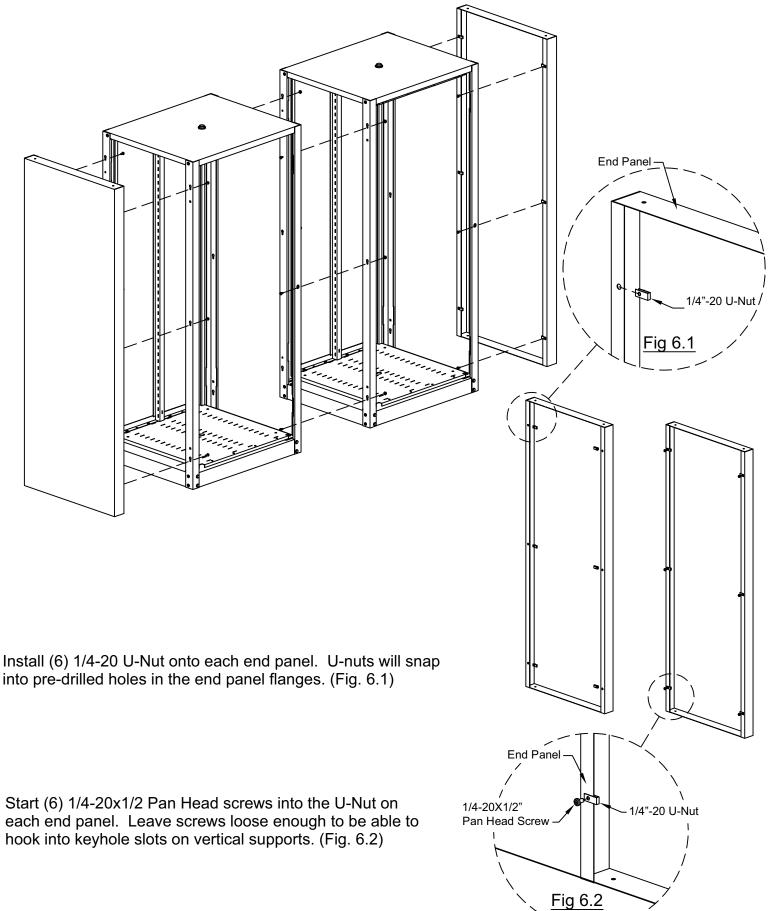

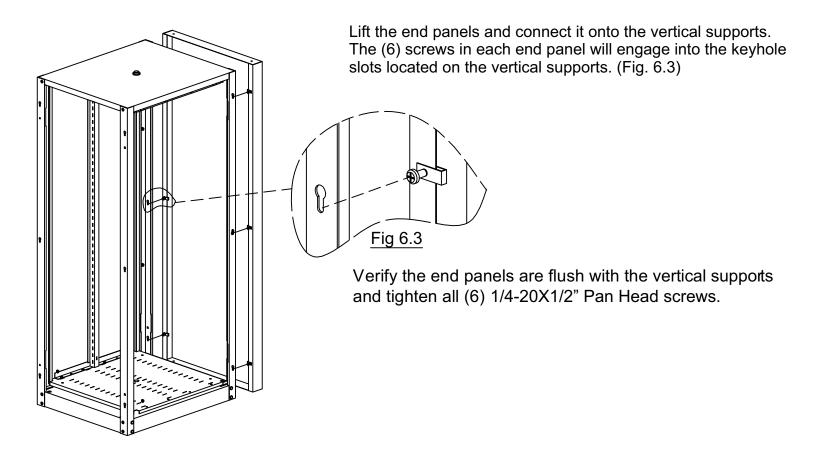

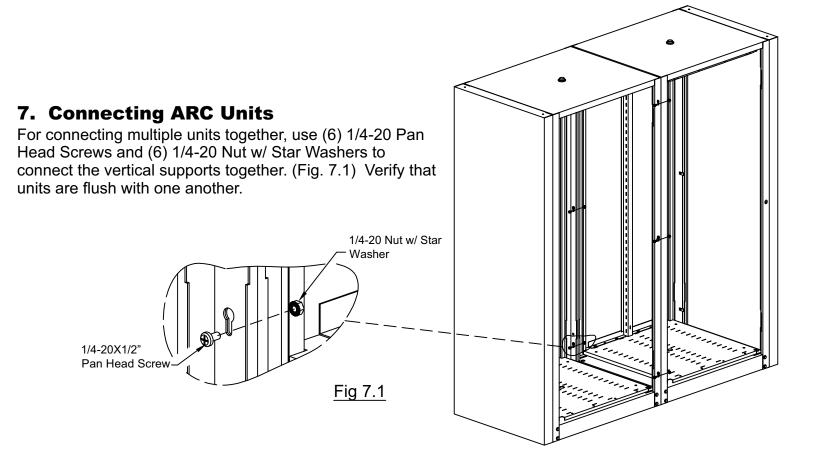


#### 8. Lock Installation

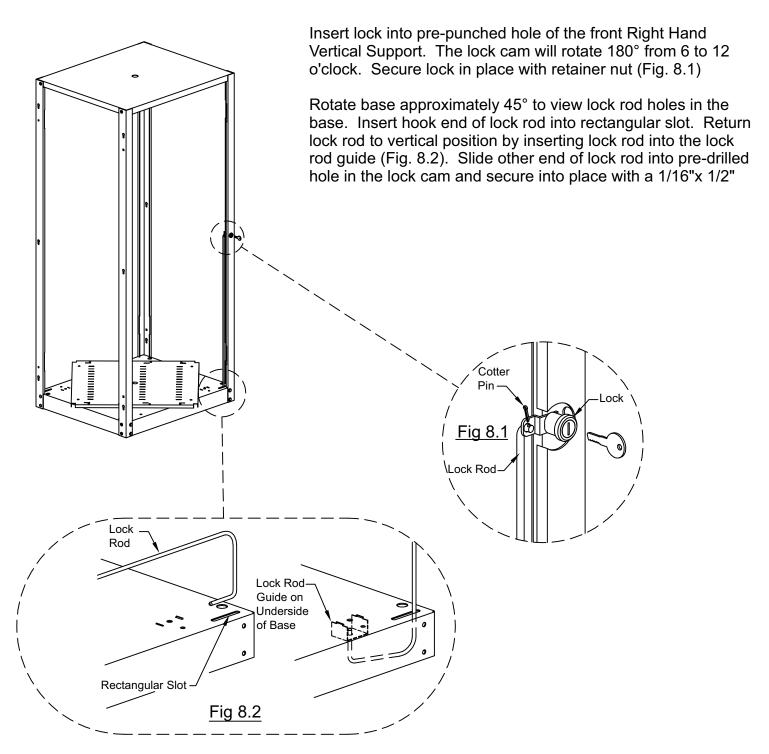


Note: The lock rod and lock can be installed at this time or after step & of installing the vertical supports.

### 9. Safety Strip Installation

(4) Safety strips are provided with each ARC unit. Press the safety strip onto each vertical support (Fig. 9.1).

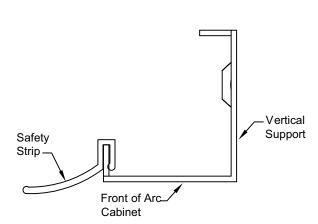


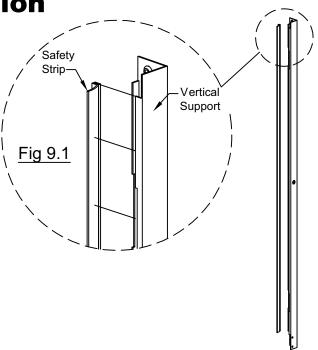

Top View of Assembled Safety Strip

#### **10. Level Units**


Using a 1/4" long neck socket and a bubble level, adjust (4) levelers on each base until units are level (Fig. 10.1). Leveling Access holes are located at the corners of the unit base.

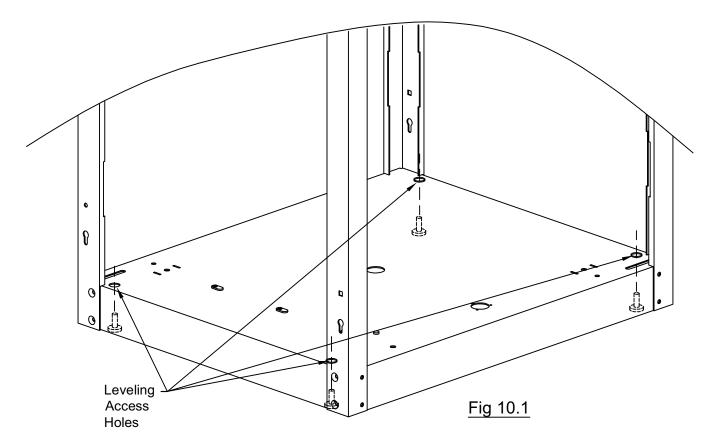



#### 11. Stationary Shelf


1. Install the left and right hand shelf ends to the shelf (Fig. 11.1)

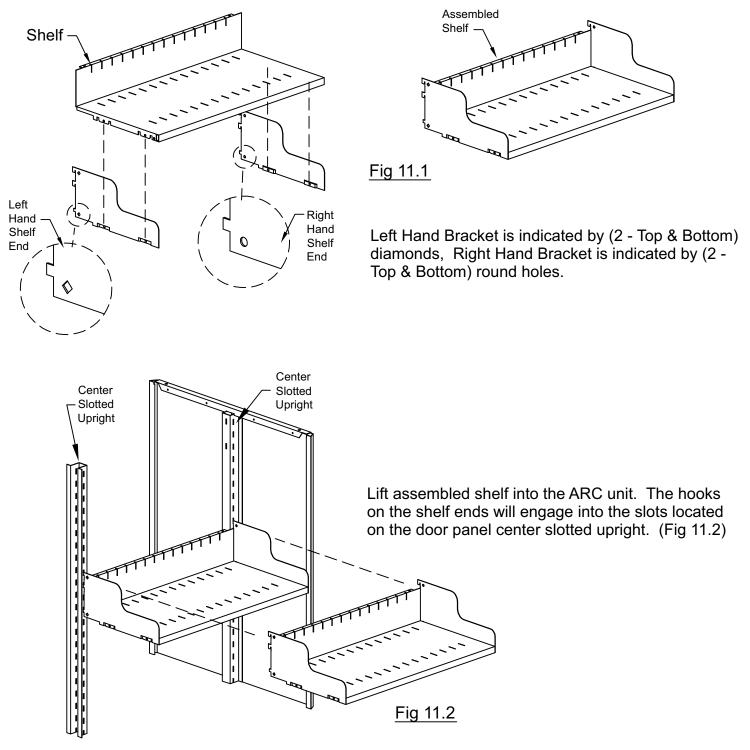


Door panel


#### 12.) Pass Through Shelf

1. Install the left and right hand shelf ends to the shelf (Fig. 12.1)

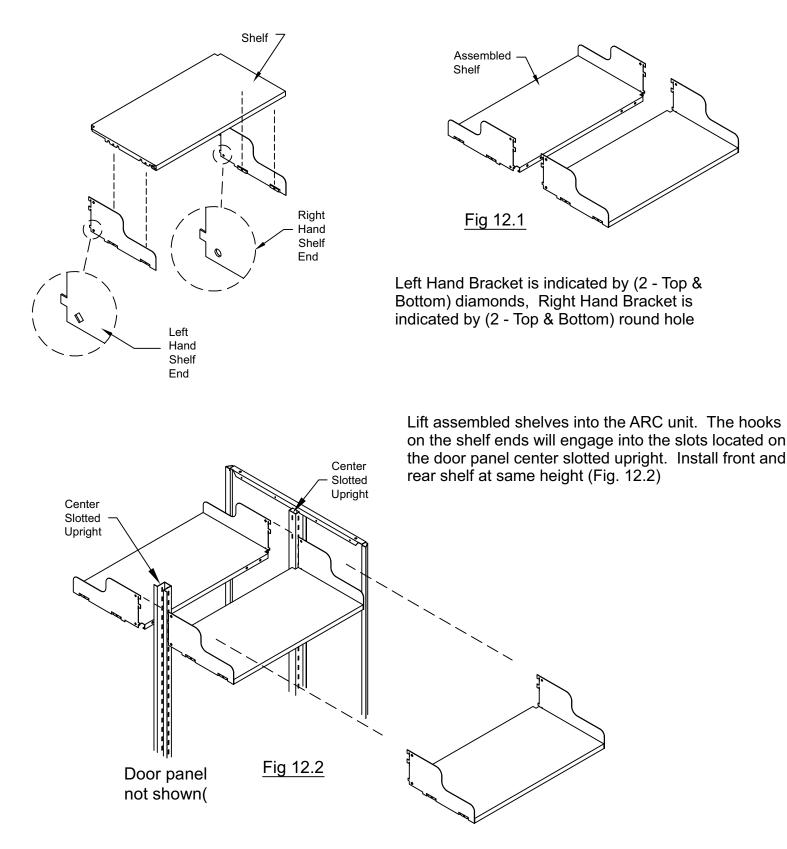

#### **13. Reference Shelf**

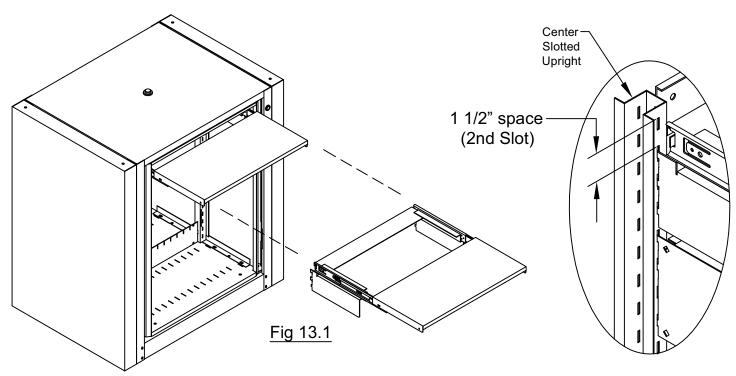

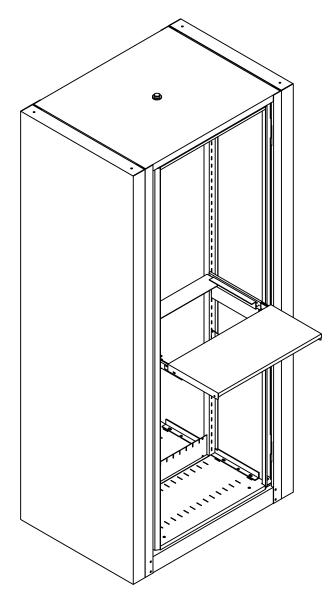

1. When installing a Reference Shelf into a low height ARC unit, the extra space is best left at the top, above other accessories.

Lift the Reference Shelf into the ARC unit. Install using the 2nd slot from the top of the center slotted upright. The hooks on the shelf ends engage into the slots (Fig. 13.1)


2. When installing a Reference Shelf into a tall height ARC unit, install at waist level between any accessories.

NOTE: In a unit specified for end tab filing, there is space to install the reference shelf between the 3rd and 4th shelves without losing any free space.

Install lower accessories prior to installing Reference Shelf. Once Reference shelf is installed, continue installing accessories above.


Lift the Reference Shelf into the ARC unit. The hooks on the shelf ends will engage into the slots located at the center of the unit.

#### 14. Roll - Out Features

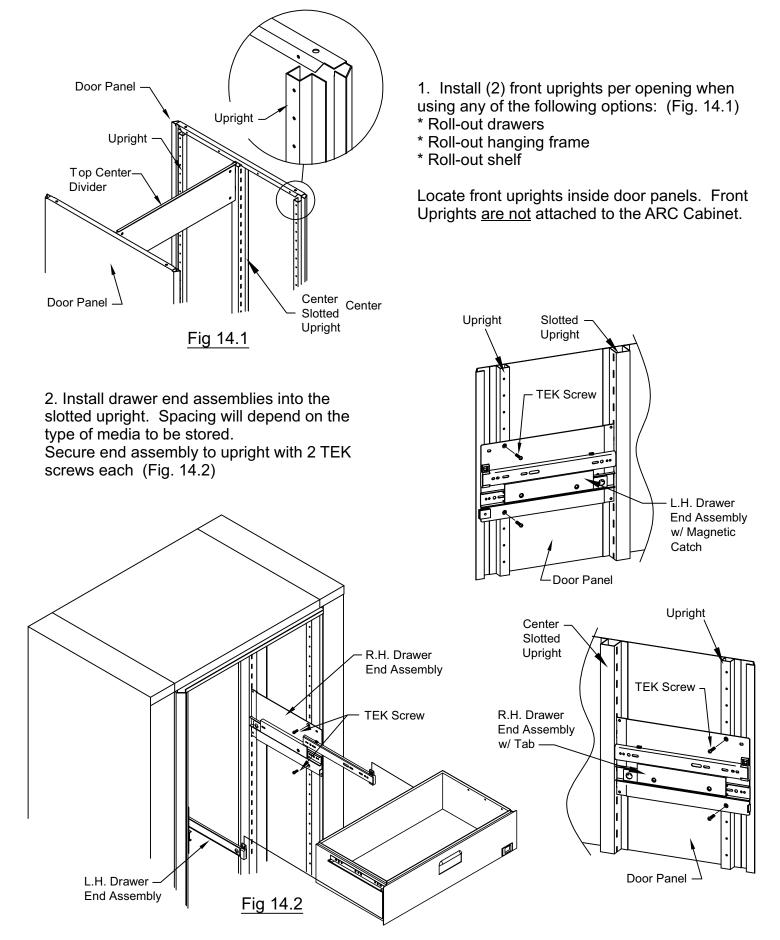

#### ADDENDUM 'A'

#### INSTALLATION INSTRUCTIONS for WALL CLOSURE STRIPS

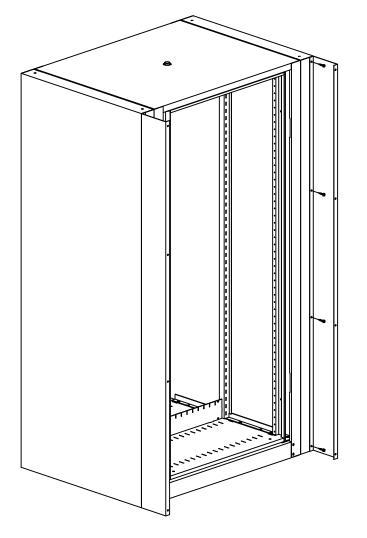

NOTE: When installing a row of ARC units: apply one closure strip to the first unit and move it into position. Join all but the final adder unit to the row. Attach the remaining closure strip to the final unit and move it into position to complete the installation.

1. Build the ARC unit away from the wall and near the final installation location.


<u>DO NOT</u> install interior accessories at this time.

2. Align Wall Closure Strip with the ARC unit end panel edge. Attach the closure strip(s) using the screws provided in the hardware bag.

3. Push the ARC Unit into position against the wall and adjust the levelers as required.

4. Complete the installation of accessories at this time.

#### INSTALLATION INSTRUCTIONS for BACK-to-BACK CLOSURE STRIPS

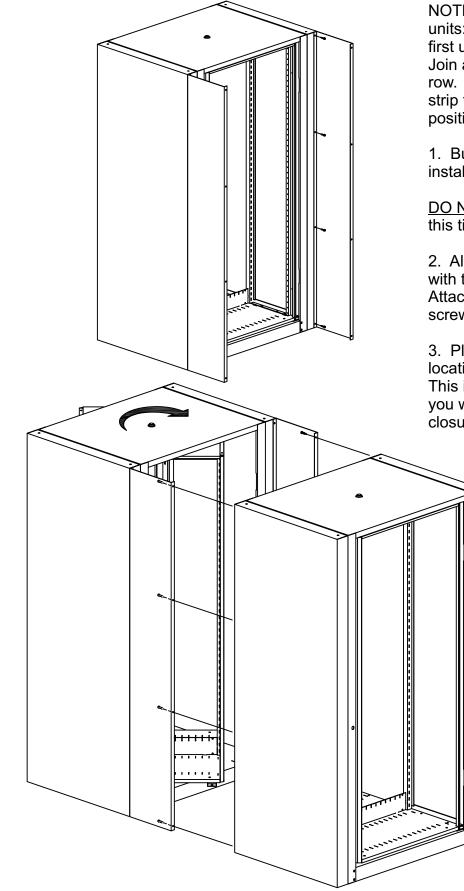

NOTE: When installing a row of ARC units: apply one closure strip to the first unit and move it into position. Join all but the final adder unit to the row. Attach the remaining closure strip to the final unit and move it into position to complete the installation.

1. Build the ARC units near the final installation location.

<u>DO NOT</u> install interior accessories at this time.

2. Align Back-to-Back Closure Strip with the ARC unit end panel edge. Attach the closure strip(s) using the screws provided in the hardware bag.

3. Place this ARC unit at the desired location and level unit as required. This is the ARC unit through which you will attach the second unit to the closure strips.

4. Move the second ARC unit into position against the mounted closure strips.

5. Level the second ARC unit as required.

6. Rotate the internal ARC carriage of the first unit to provide access for attaching the second unit.

7. View the location of the closure strip holes through the first unit and attach the second unit using the screws provided in the hardware bag.

8. Complete the installation of accessories in both ARC units at this time.