




Sterling Series™
Bookcase, 2 Shelf
Model No. STEB2C

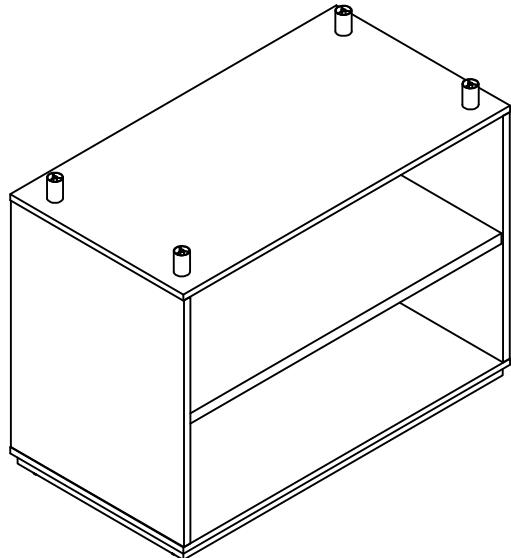

ASSEMBLY INSTRUCTIONS

CALL 1-800-822-8037 FOR ASSISTANCE

PARTS LIST



Name	Part	Qty.	Spare Qty
A	 HB	8	1
B	 HB	8	1
C	 HB	8	1
D	 HB	8	1
E	 HB	4	


Name	Part	Qty.	Spare Qty
F	 HB	4	
G	 HB	4	1
H	 HB	4	1
I	 HB	18	1
	 HB		
	STEB2CHB		

Items with HB are in hardware box.

**Denotes Color Code

PARTS LIST

Name	Part	Qty.
J	 STE2CJ** Top	1
K	 STE2CK** Left Side Panel	1
L	 STE2CL** Right Side Panel	1

Name	Part	Qty.
M	 STE2CM** Bottom Panel	1
N	 STE2CN** Back Panel	1
O	 STE2CO** Shelf Panel	1


**Denotes Color Code

2

IMPORTANT!


Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

1 Install Levelers (E) into threaded inserts in underside of Bottom Panel (B).

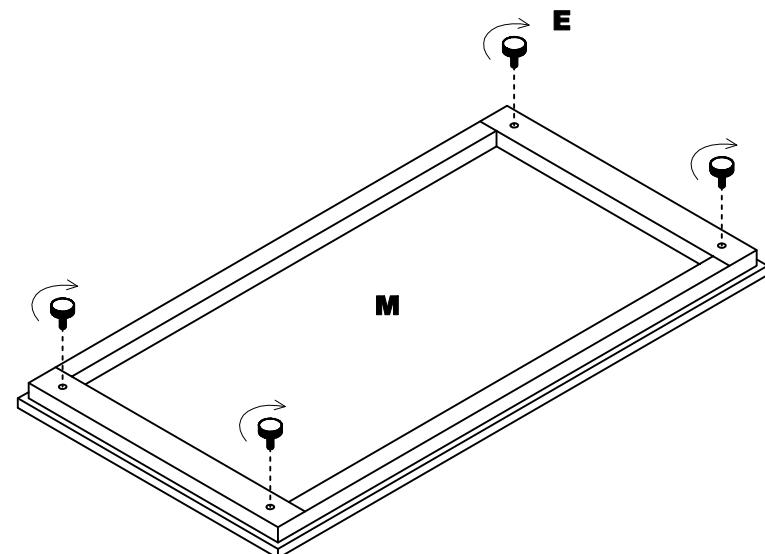


3

2 Insert Wood Dowels (A) into Side Panels (K & L). Insert Cam (B) into Side Panel (K & L). Install Cam Posts (C) Top (J) & Bottom panel(M). Attach Top (J) & Bottom panel(M) to assembled cabinet by turning Cams (B). Apply Cam Stickers (D) to Cams (B) of Side Panel (K & L).

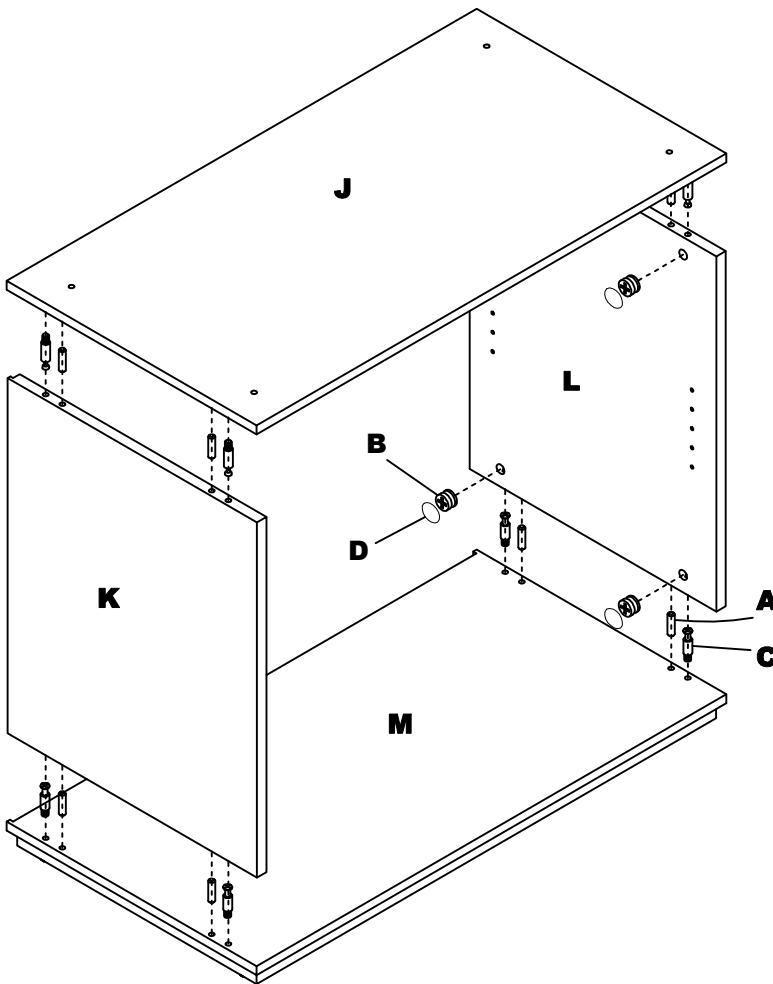


4

3 Attach the Back Panel (N) to the Top (J) , Side Panels (K & L) and the Bottom Panel (M) by using Screws (L).

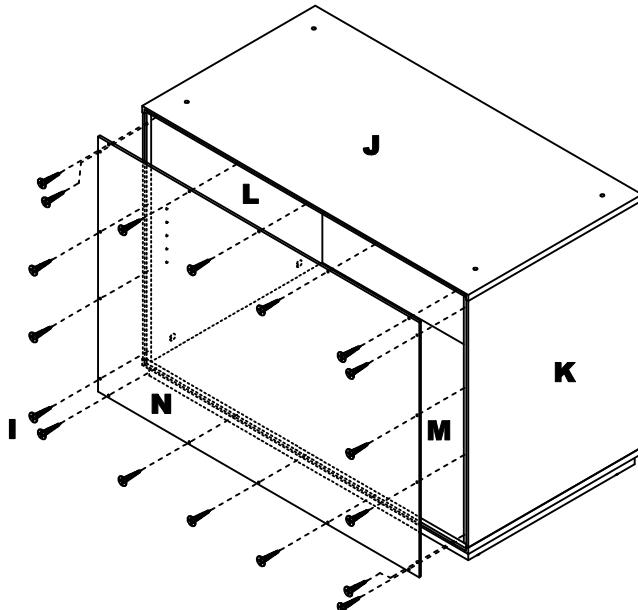


4 Install Base Stand-off (F) into threaded inserts in underside of Top STEFST or STERRT.

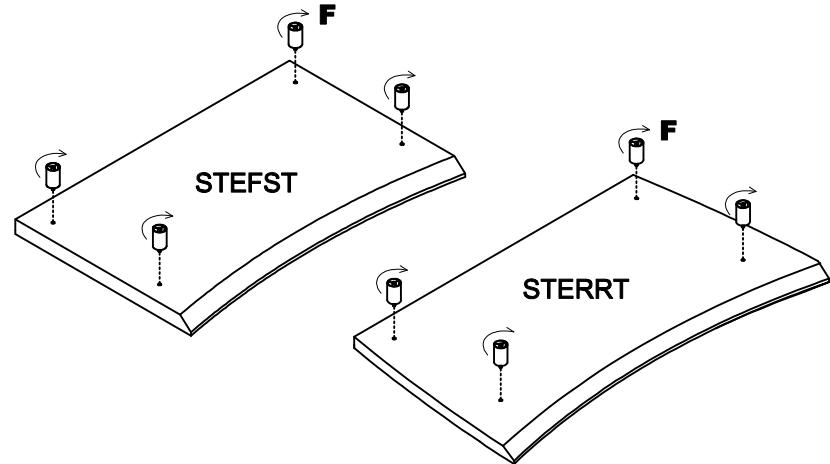


5

5 Install the Top (J) to the underside of STEFST or STERRT using Screws (G).

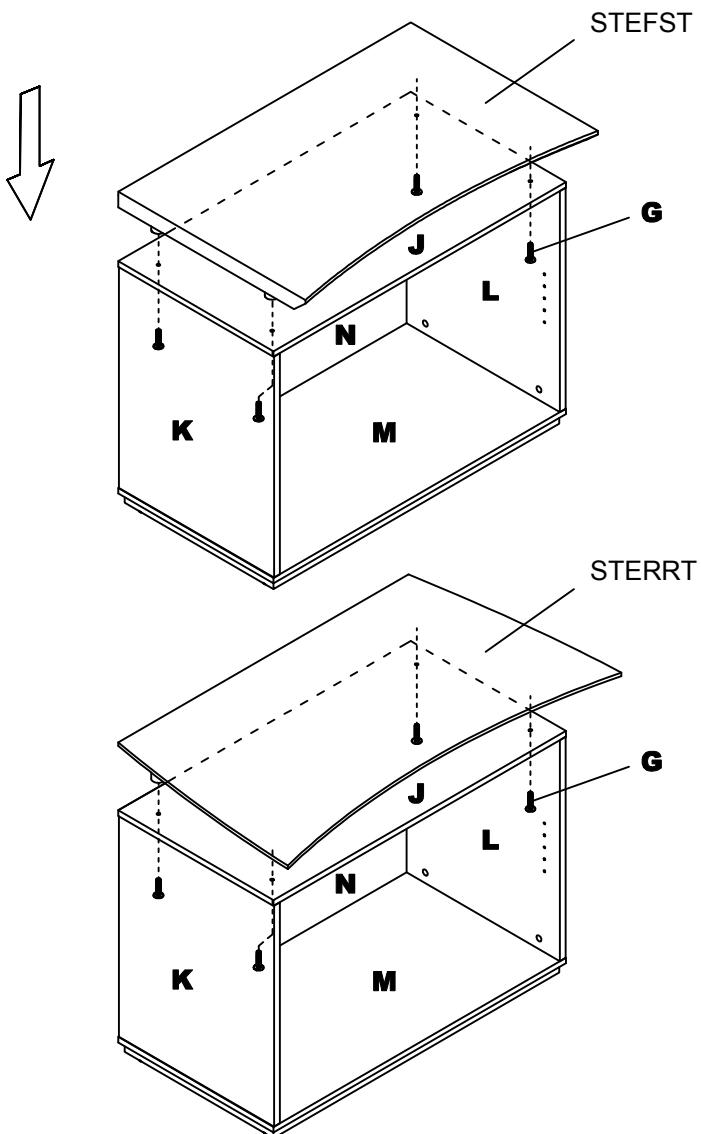

6

6 Insert Shelf Supports (H) into the Side Panels (K & L) at the desired height. Put the Shelf Panel (O) on the Shelf Supports (H).

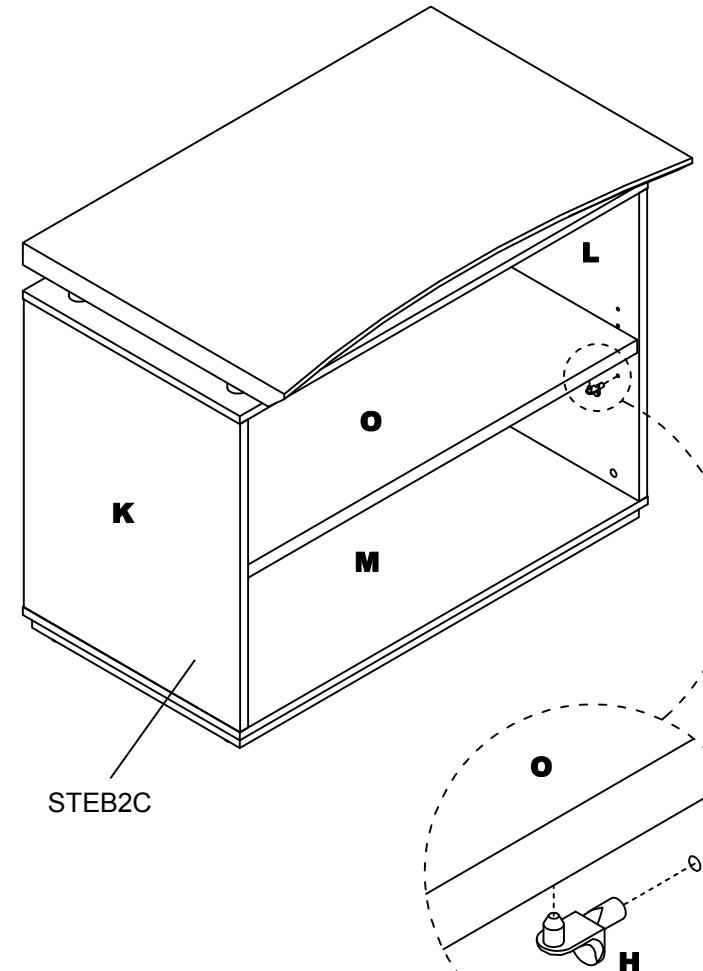

7