






Medina Series™  
 Reception Return  
 Model No. MNRR

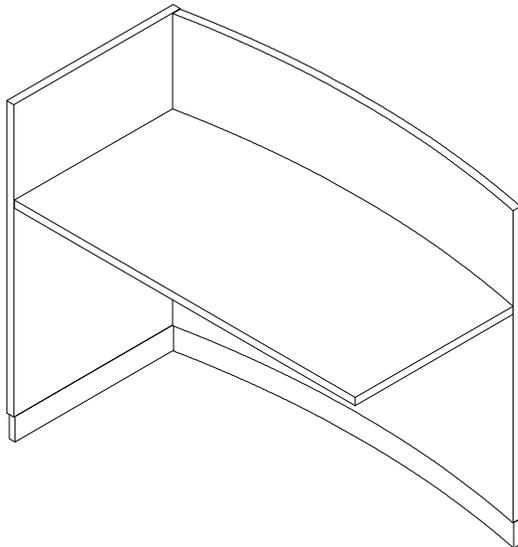

ASSEMBLY INSTRUCTIONS

CALL 1-800-822-8037 FOR ASSISTANCE



# PARTS LIST


Name	Part	Qty.	Spare Qty.	Name	Part	Qty.	Spare Qty.
<b>A</b>	 <b>REALS004</b> Wood Dowel	2	1	<b>G</b>	 <b>REALS136</b> Mntg Clip	2	
<b>B</b>	 <b>REALS003</b> Cam Post	9	1	<b>H</b>	 <b>REALS406</b> Mntg Plate	2	
<b>C</b>	 <b>REALS001</b> Cam Lock	15	1	<b>I</b>	 <b>REALS429</b> Leveler	4	
<b>D</b>	 <b>REALS102**</b> Cam Sticker	24	1	<b>J</b>	 <b>REALS129</b> M6 x 15mm Black	8	1
<b>E</b>	 <b>REALS088</b> Mntg Bracket	4			 <b>MNRRHB</b>		
<b>F</b>	 <b>REALS267</b> Ø4 x 20mm Black	28	1				

Items with HB are in hardware box.

\*\*Denotes Color Code

# PARTS LIST

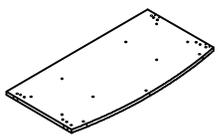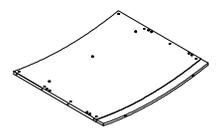Name	Part	Qty.
<b>K</b>	 <b>MNRRT**</b> Top	<b>1</b>
<b>L</b>	 <b>MNRRP**</b> Front Panel	<b>1</b>

Name	Part	Qty.
<b>M</b>	 <b>MNRRTM**</b> End Panel	<b>1</b>

**NOTE:**


- ①. Reception Return Top & End Panel packed in one carton - **MNRRT**
- ②. Reception Front Panel with Hardware packed in one carton - **MNRRP**

**IMPORTANT!**


**Review ALL instructions before beginning assembly.** These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

\*\*Denotes Color Code

- 1** Install Cam Posts (B) into End Panel (M). Insert Cams (C) to inside of the Front Panel(L). Insert Cams (C) in the underside of the Top (K). Install Levelers (I) into threaded inserts in underside of End Panel (M) and Front Panel(L).

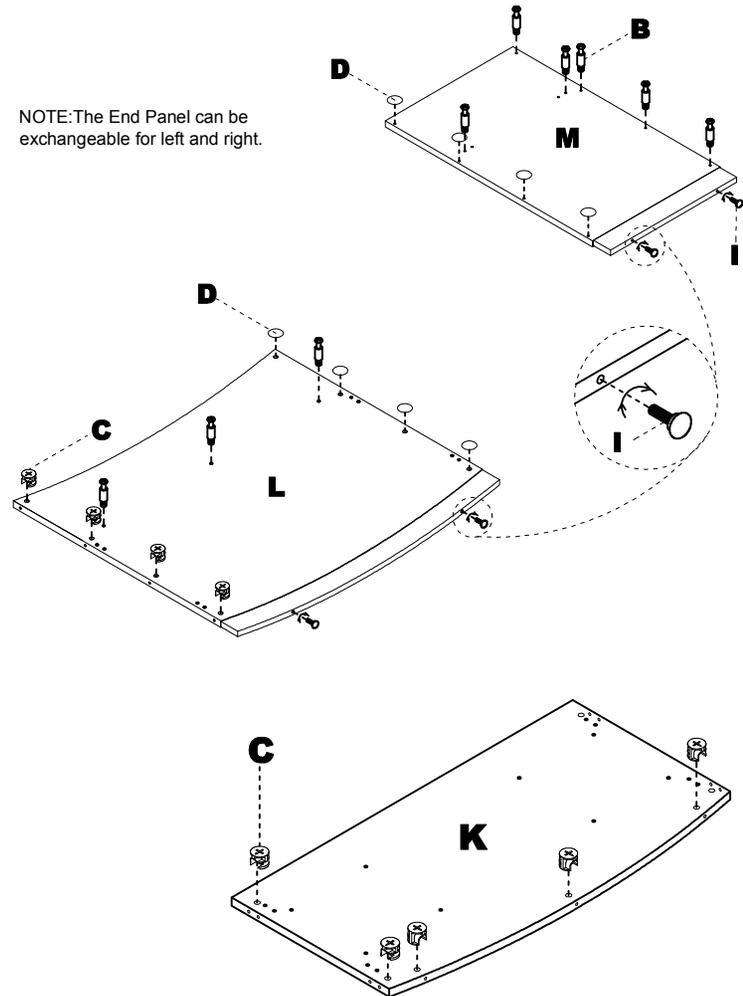


- 2** Attach Top (K) and Front Panel (L) by turning Cams (C). Apply Cam Stickers (D) to Cams (C) of Top (K) and Front Panel (L).

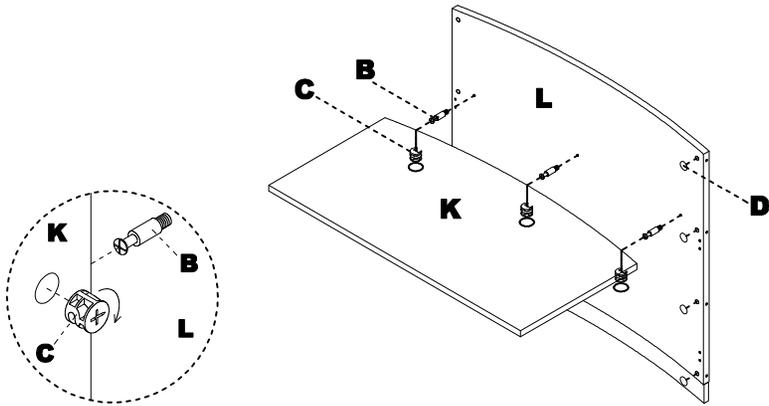

NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.


- 3** Attach Top (K) and Front Panel (L) and End Panel (M) by turning Cams (C). Apply Cam Stickers (D) to Cams (C) of Top (K) and Front Panel (L) End Panel (M).

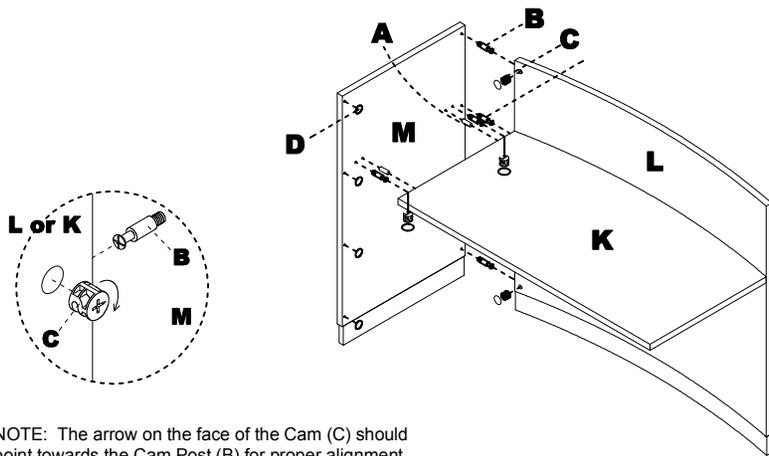

NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.


**4**

- 4** Attach Mntg Bracket (E) to the Top (K) and End Panel (M) & Front Panel (L) using Screws (F).

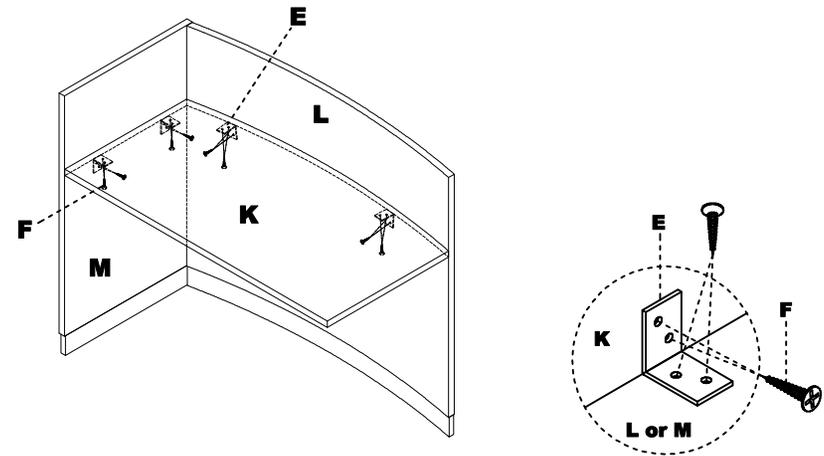


NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.

- 5** Finished the assembly of the Reception Return.


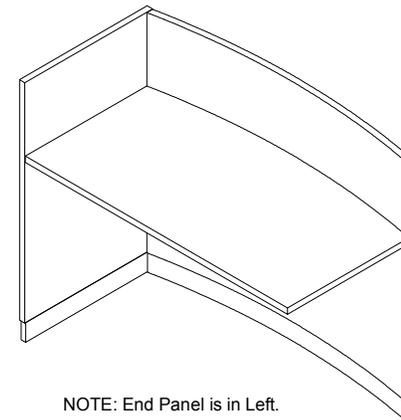


NOTE: End Panel is in Left.



**5**

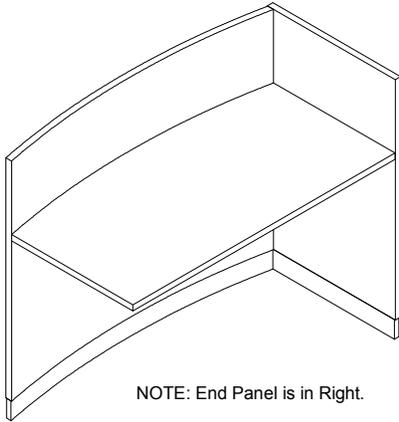

**6** Attach Mntg Clip (G) to the Reception and Reception Return using Screws (J). Attach Mntg Plate (H) to the Reception and Reception Return using Screws (F).

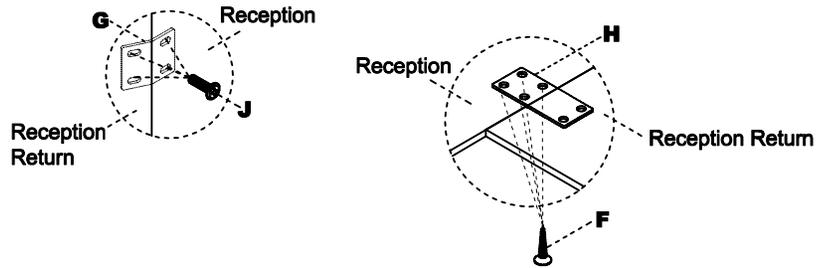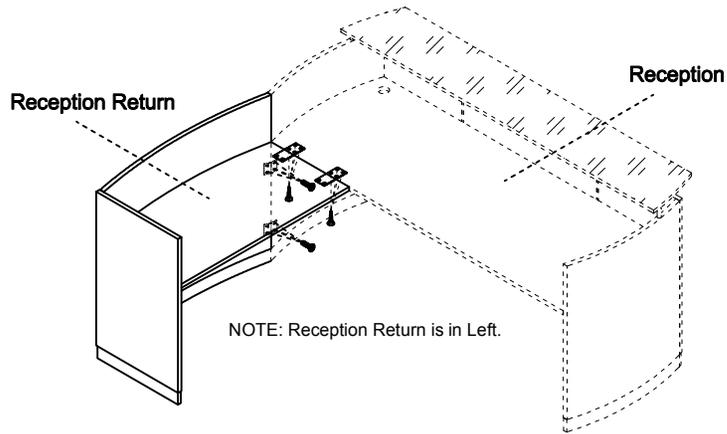

**6**

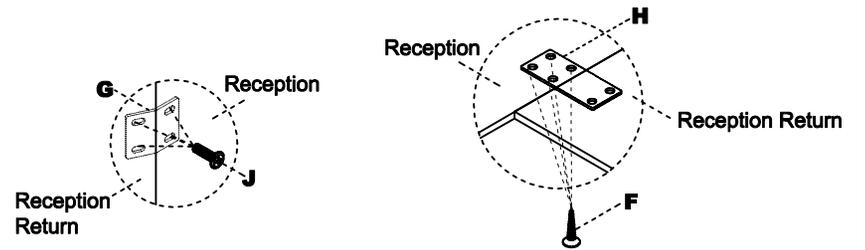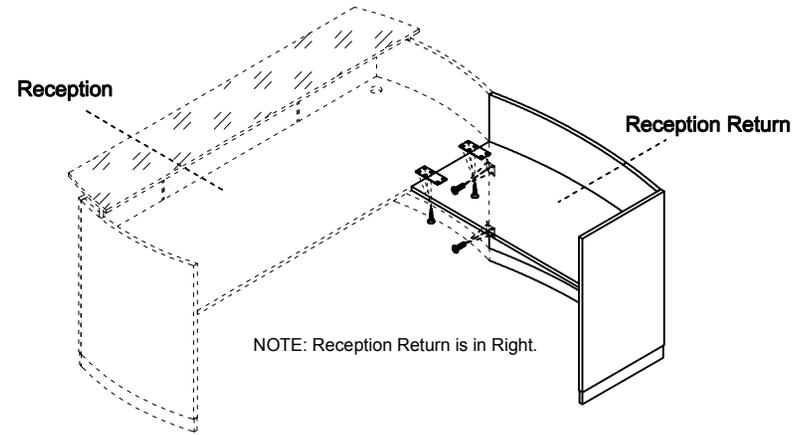

**7**