



Sterling Series[™]
Credenza 72"
Model No. STECT72

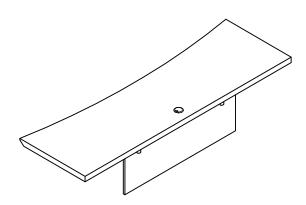

ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE

PARTS LIST

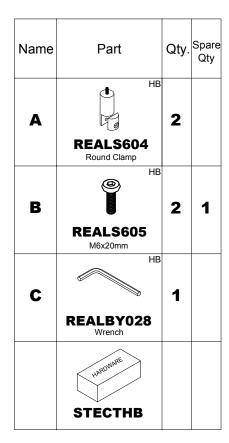


Name	Part	Qty.	Spare Qty
D	НВ	1	
	REALS087 Grommet		
E		1	
	STECT72**		
F		1	
	STECTF** Modesty Panel		

Items with HB are in hardware box.


**Denotes Color Code

IMPORTANT!


Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

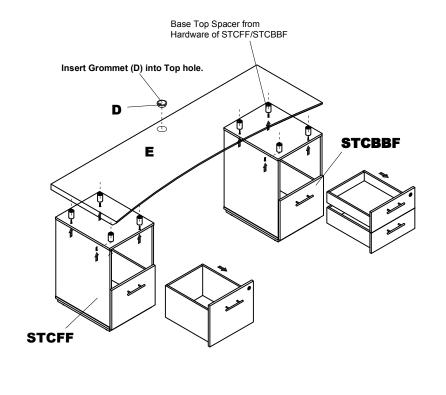

1 Install Round Clamp (A) into the Bottom of Top for STECT72.

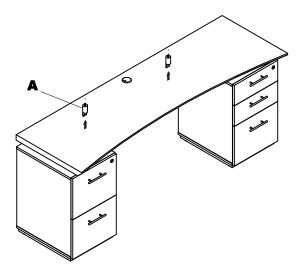

(2) Install the Modesty Panel (F) by Round Clamp (A) and Screws (B).

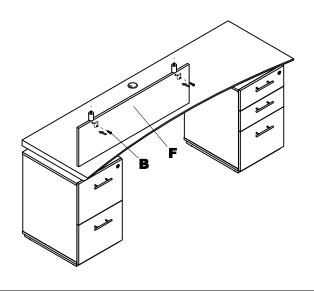

2