





RESWRD




Resi™ Wardrobe

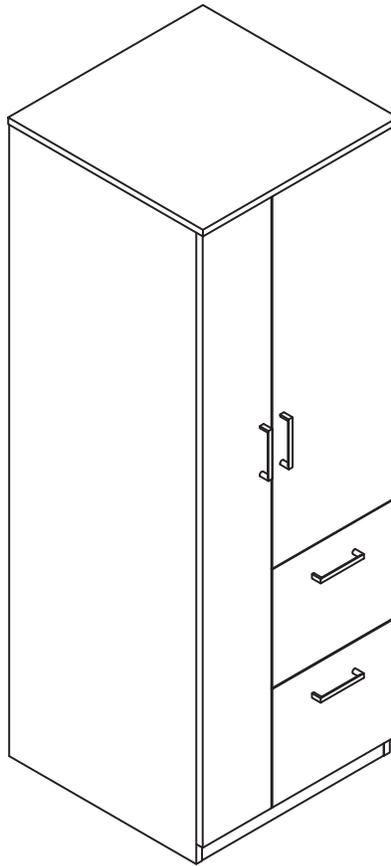


For questions or concerns, please call 1-888-971-6225
Available Monday - Friday 7:30 AM to 5:00 PM (Central Time)
(English-speaking operators)


PARTS LIST

Name	Part	Qty.	Spare Qty.
A	 Wood Dowel	24	1
B	 Cam Post	28	1
C	 Cam Lock	28	1
D	 Cam Sticker	32	1
E	 Garment Bar Support	2	
F	 Ø4mm*16mm	4	1

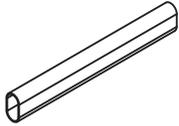

Name	Part	Qty.	Spare Qty.
G	 Garment Bar	1	
H	 Plate with Leveler	4	
I	 Ø4mm*16mm	24	2
J	 Shelf Pin	24	1
K	 Handle with Screws	2	
	 RESWRDHB		

PARTS LIST

Name	Part	Qty.
L	 Top	1
M	 Left Side Panel	1
N	 Right Side Panel	1
O	 Center Board	1
P	 Bottom Panel	1
Q	 Toe Kick	1
R	 Fixed Shelf	1

Name	Part	Qty.
S	 Large Shelf	2
T	 Small Shelf	4
U	 Back Panel	1
V	 Left Door	1
W	 Right Door	1
X	 Upper Drawer	1
Y	 Lower Drawer	1

PRE-INSTALLED REPLACEMENT PARTS LIST

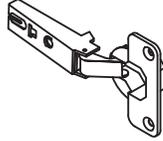
Part	Qty.
 Hinge	5
 Hinge Plate	5
 Handle with Screws	2
 Drawer Slide Pair	2
 Bumper	4
 Ø4mm*16mm	20
 Ø4mm*14mm	40

IMPORTANT!




Review **ALL** instructions before beginning assembly.

These instructions are provided to avoid problems that may occur from improper assembly or installation.

SAFCO and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

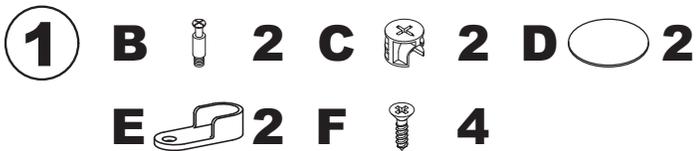


NOTE: Insert Cams first, and align arrow towards the hole the cam post fits into.

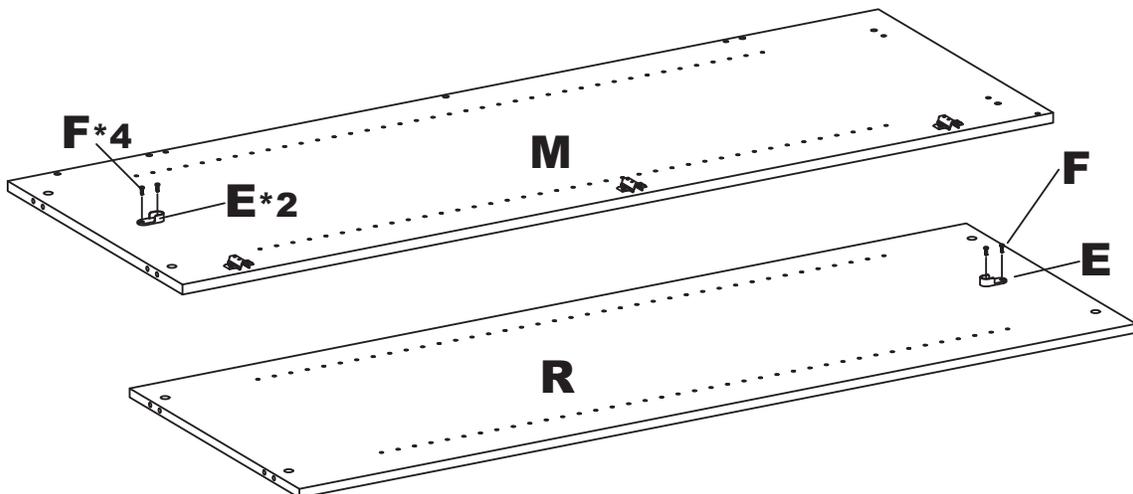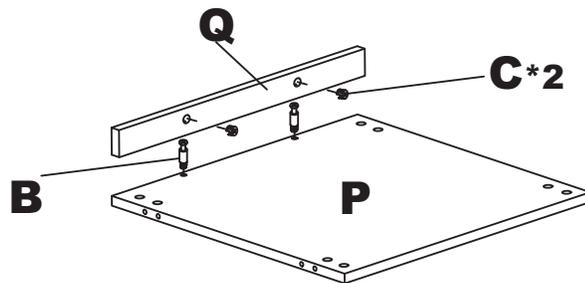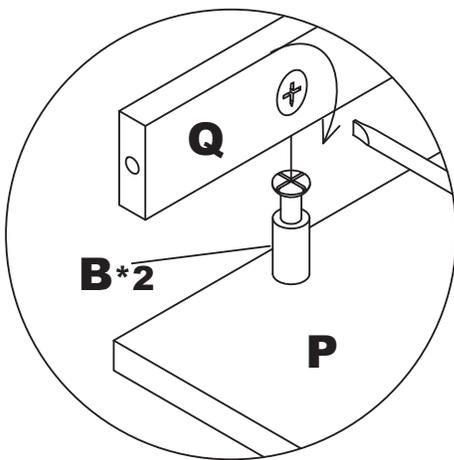


- 2** **A**  **2** **B**  **2** **C**  **2**
D  **2**

NOTE: Insert Cams first, and align arrow towards the hole the cam post fits into.

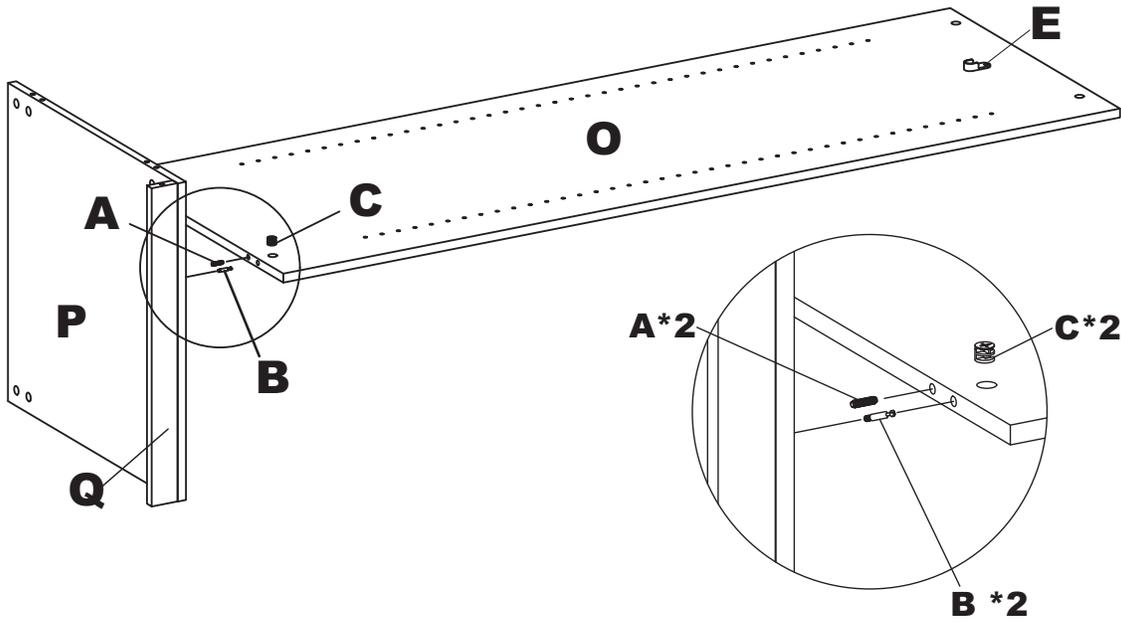


- 3** **A**  **7** **B**  **6** **C**  **6**
D  **6**


NOTE: Insert Cams first, and align arrow towards the hole the cam post fits into.

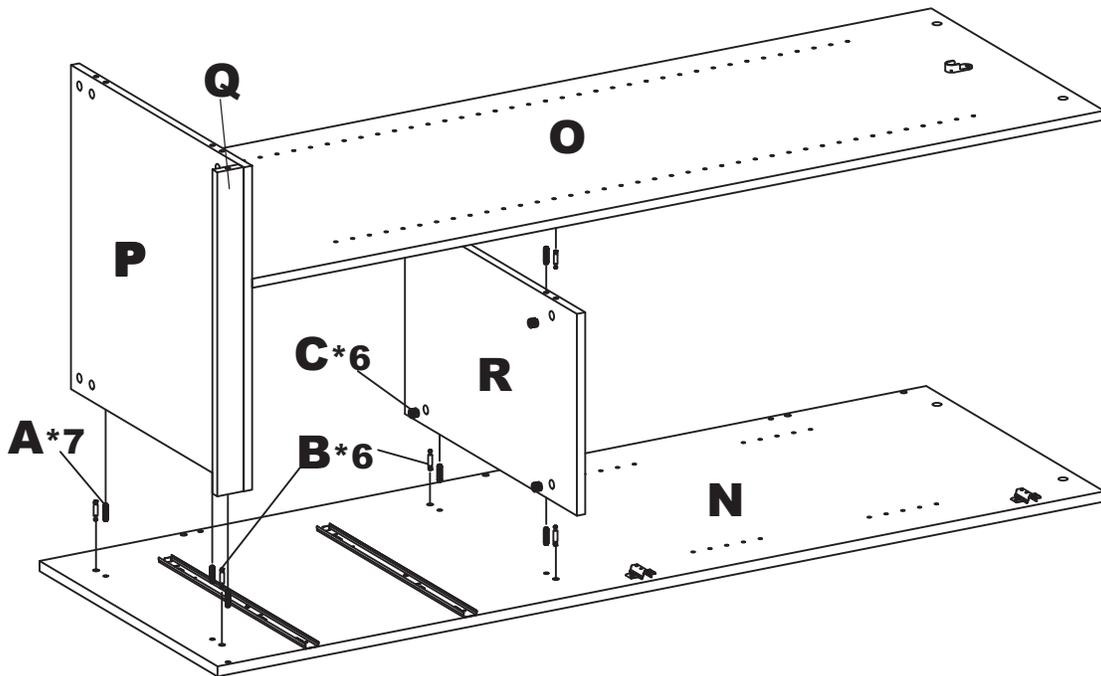


- 4** **A**  **7** **B**  **10** **C**  **18** NOTE: Insert Cams first, and align arrow towards the hole the cam post fits into.
D  **18**

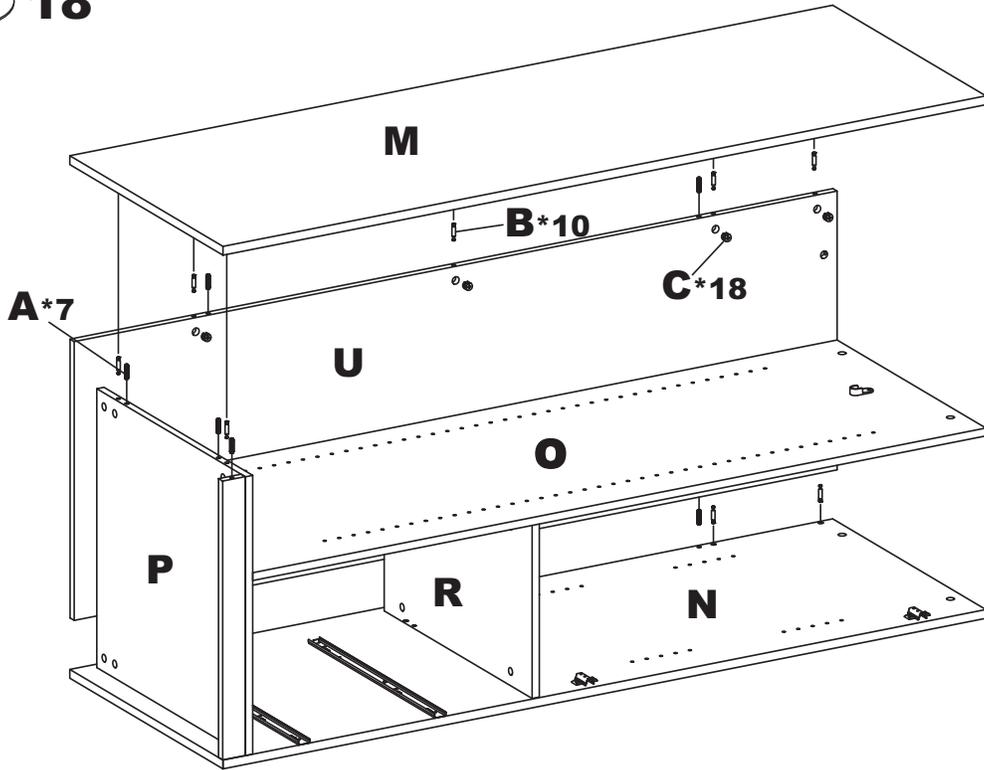


- 5** **A**  **8** **B**  **8** **C**  **4** NOTE: Insert Cams first, and align arrow towards the hole the cam post fits into.
D  **4** **G**  **1** **H**  **4**
I  **24**

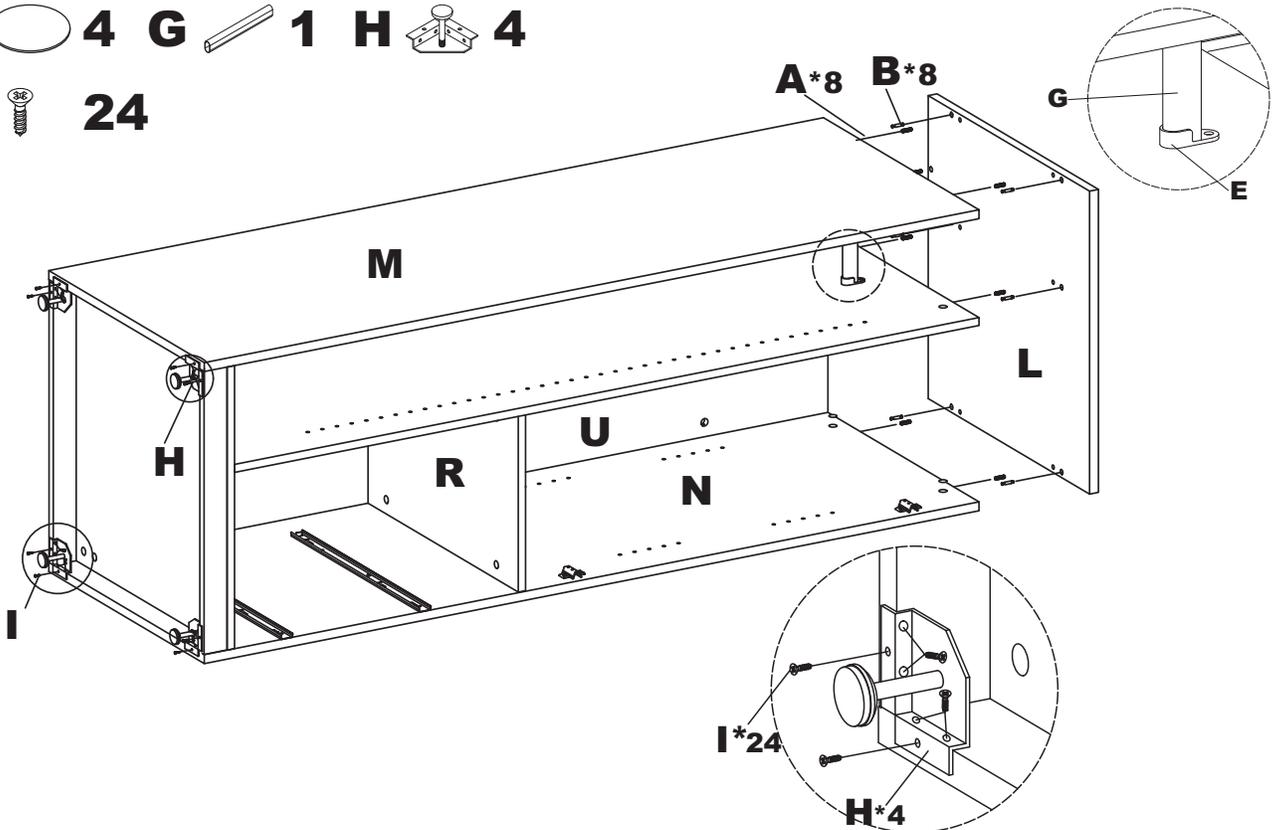

6 **D**  **4** **J**  **24**

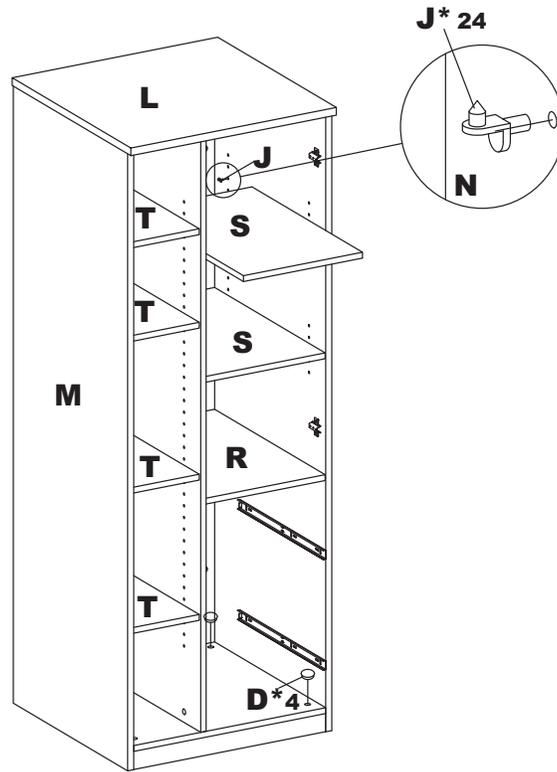

7 **K**  **2**

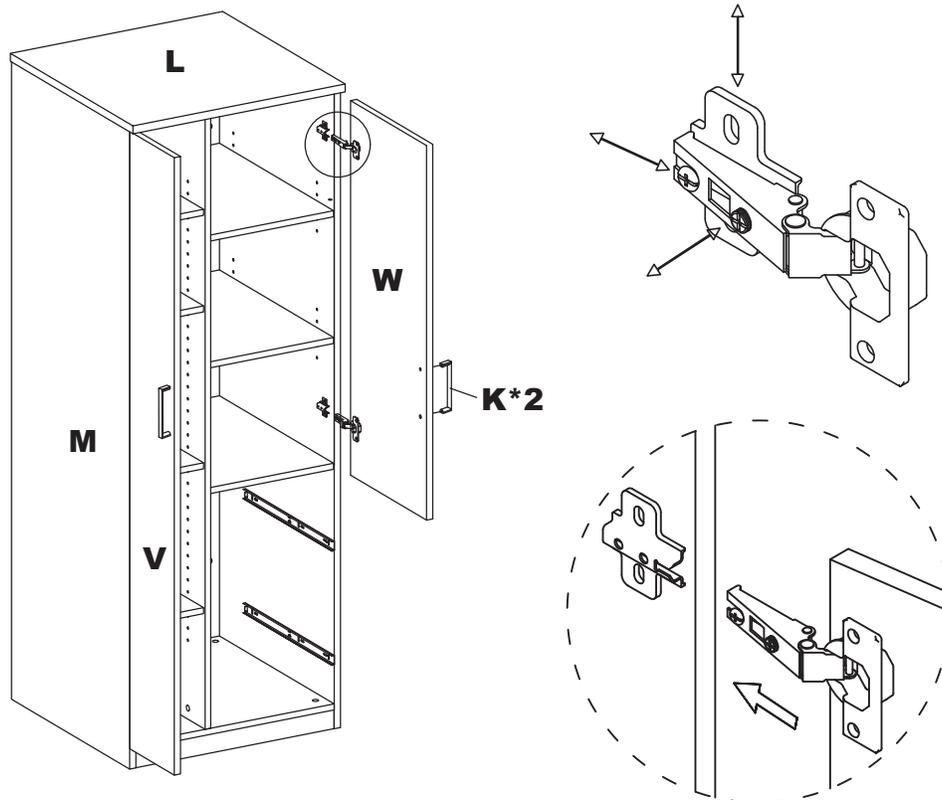

8

