


ASSEMBLY INSTRUCTIONS MAYTRIX™ LAN FURNITURE WORK SURFACE ASSEMBLY

NOTE: Please count and inspect all pieces before disposing of any carton or packing materials.

COMPONENTS: When ordering components, specific color and/or size information may be required. Contact a Safco Customer Service Representative. 1-888-971-6225

REF.# QTY. 1 1 <u>DESCRIPTION</u> CENTER SUPPORT BRACKET PART No.

** Denotes Color Code ~~Denotes Size

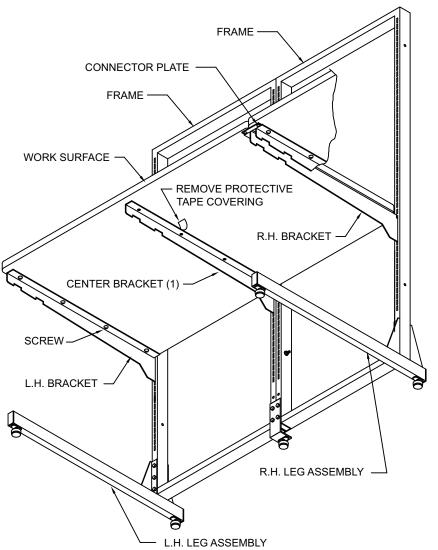

- 1. Assemble Frames and Legs per instructions included with these components.
- 2. Select height desired for Work Surface and install Left and Right Brackets.

NOTE:

When installing a 48", 60", or 72" Work Surface, one additional Center Support (1) is required. When installing a 90" Work Surface two additional Center Supports (1) are required.

3. Position Work Surface on brackets.

NOTE:

Position center bracket at desired location before the tape makes contact with the work surface.

Engage all work surface Screws, but do not tighten. This will aid with bracket / work surface alignment.

When aligned, tighten all screws.


<u>CONNECTOR PLATE</u> (Bag Assembly No. A4911 - if required):

- 1. Position plate at front of brackets equally spanning the seam of the tops, and mark the two holes.
- 2. Pre drill 2 holes, 1/8" diameter x 1/2" deep.

Attach Connector Plate with two #10 x 3/4 screws included with plate.



For questions or concerns, please call **1-888-971-6225** available Monday-Friday 7:30AM to 5:00 PM (Central Time) (English-speaking operators)

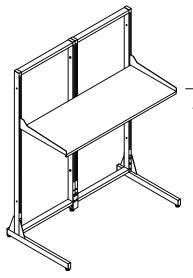

ASSEMBLY INSTRUCTIONS MAYTRIX™ LAN FURNITURE CENTER SUPPORT ASSEMBLY

NOTE: Please count and inspect all pieces before disposing of any carton or packing materials.

<u>COMPONENTS:</u> When ordering components, specific color and/or size information may be required. Contact a Safco Customer Service Representative. 1-888-971-6225

REF.#	QTY.
1	1
2	1

DESCRIPTION FLAT SHELF ASSEMBLY CENTER BRACKET SUPPORT PART No. CALL~~** CALL~~**

